

Wallmur

Installation Guide

To make sure you understand the entire installation process, take time to read this tutorial before hanging. Don't hesitate to get in touch with our customer care staff if you have any questions about any of the steps; they will be pleased to assist you.

General Preparation

Remove any old backing paper from the wall surface. The Surface should be free from contaminants such as dirt, dust, grease, mildew, and ink stains; any of these can prevent adhesion from taking place.


Emulsion paint: No further preparation is needed.

Porous surface (plaster, cement render): Ensure old plaster is stable and free of mold. Ensure new plaster is dry in depth. Prime surface with a PVA-based primer or emulsion paint and allow to dry before hanging.

Non-porous surface (gloss paint): No further preparation is needed.

Tools

- Soft brush for smoothing
- Utility knife (Stanley/craft)
- Pasting brush or roller
- Adhesive
- Plumb line / spirit level
- Seam roller
- Scissors
- Straight edge / ruler

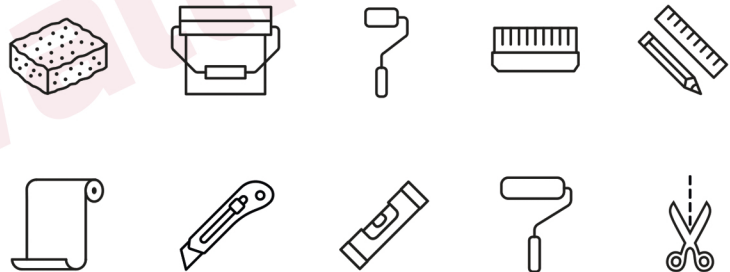


Lay out Your Mural

1. Unroll the wallpaper and separate the strips. Identify each strip and arrange them in hanging order on the floor by aligning the strip numbers to the bottom right corner. Each strip is numbered in hanging order from left to right.


Please note: If you have ordered multiple murals, they may be rolled together.

2. Lay out strips to check image match before installation. If you notice any inconsistencies within the print, please do not install it. Our customer service team can assist you with any problems.

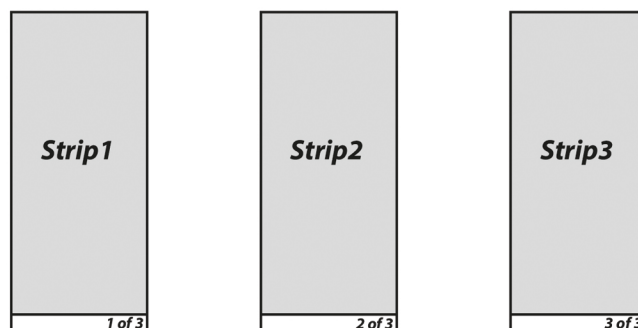

Pasting of the Wallpaper

3. The installation of the wallpaper will go successfully if the first panel is hung straight/correctly. Mark the width of a panel on the wall with a pencil, then use a plumb line or spirit level to draw a vertical line down from the mark. To hang the first panel straight, use this as a reference when doing so. Using a brush or roller, evenly apply a thin layer of wallpaper paste directly to the wallpaper back surface.

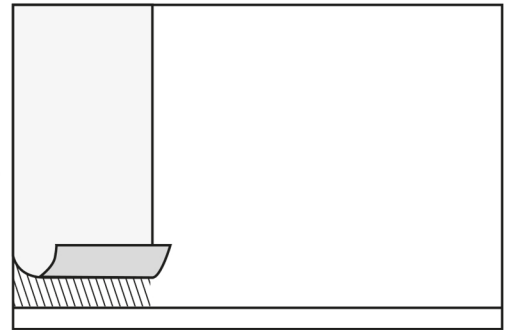

Hang the First Strip

4. Align the first strip with the penciled guideline. Hang the first strip starting from the top by leaving an excess of 1cm and working downwards. Carefully smooth away any bubbles or ripples using a soft brush or microfiber cloth.



IMPORTANT: Do not pull or stretch the material during installation. Work from the top and allow the wallpaper to fall naturally, taking particular care to avoid scuffing or scratching the printed surface.

Butt Up Strips

5. When hanging multiple strips: hang the strip's edge to edge (there is no overlap) in a butt joint. Visually match the image at the join and adjust the position until the design completely matches. Firmly butt the strips, then smooth them out with a soft brush.

6. Use a seam roller to ensure the product is well bonded at the joints, and gently wipe away any excess paste.

7. Trim away any excess paper at the top and bottom of each strip using a knife and a straight edge.

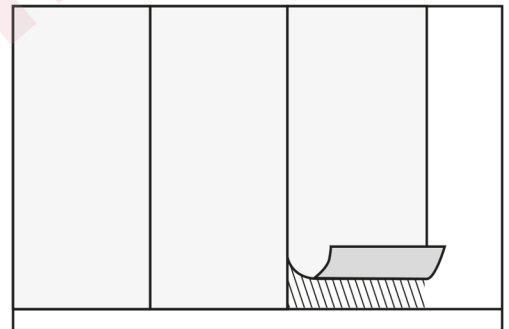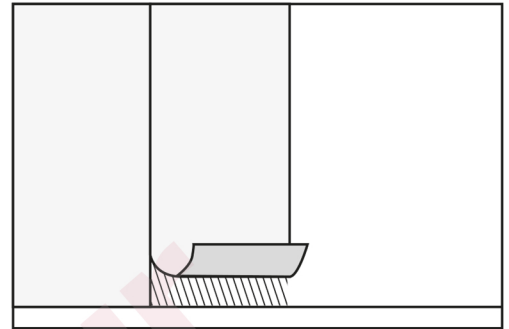

Repeat Until Finished

8. Continue the previous stages for each strip until all strips are installed. Trim away any excess wallpaper using a straightedge and sharp blade. Allow for drying at room temperature, ensuring there is some ventilation. For the first 48 hours of drying, please turn it down if there is a heat source, such as a heater/radiator or AC on the same wall as the mural.

Please Follow This Instruction to Prepare the Glue:

- Pour the glue slowly in 2.5 liters (84,5 ounces) or 1.5 liters (50 ounces) (for one package, please check the glue package for the water amount) water while mixing. Do not spill the entire package at once. (To prevent clumping.)
- Mix it for a 3-5 min
- Wait 10 min for after the mixing
- Apply glue to the backside of the first strip
- Apply the first strip to the wall. Return to the previous step and continue with the second strip.

